


LOWER FRONT
CUT 1 OF
CRAFT FOAM
(FLIP PATTERN
ON CF LINE)

LOWER
SIDE BACK
CUT 2
OF CRAFT
FOAM

SIDE SEAM

CENTER FRONT

SIDE SEAM

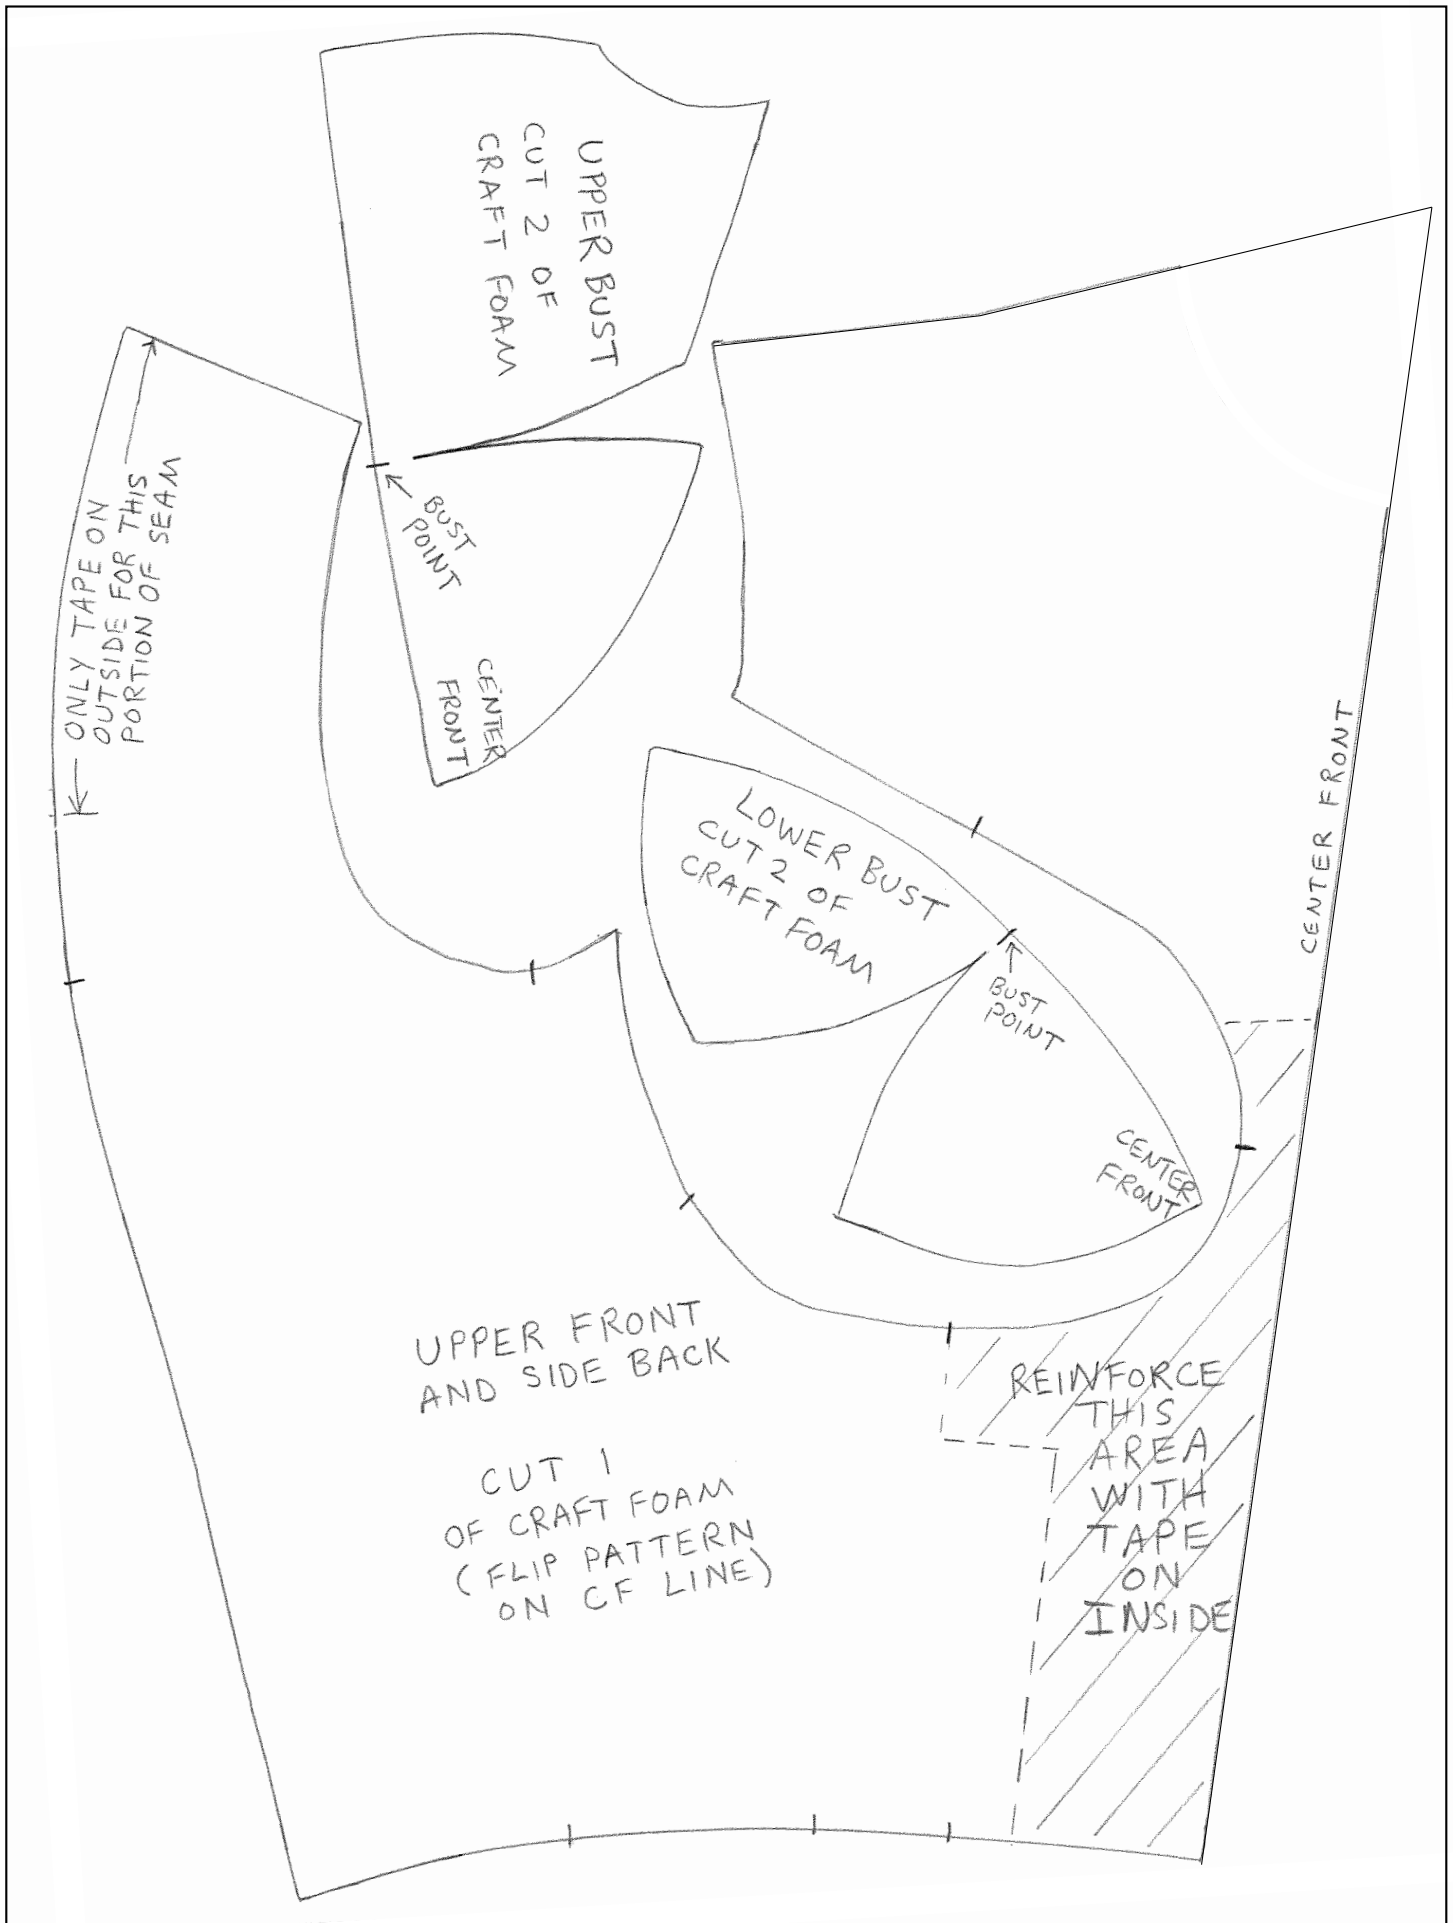

UPPER BUST
CUT 2 OF
CRAFT FOAM

BUST POINT
CENTER FRONT

LOWER BUST
CUT 2 OF
CRAFT FOAM

BUST POINT

CENTER FRONT


CENTER FRONT


UPPER FRONT
AND SIDE BACK

CUT 1
OF CRAFT FOAM
(FLIP PATTERN
ON CF LINE)

REINFORCE
THIS
AREA
WITH
TAPE
ON
INSIDE

ONLY TAPE ON
OUTSIDE FOR THIS
PORTION OF SEAM

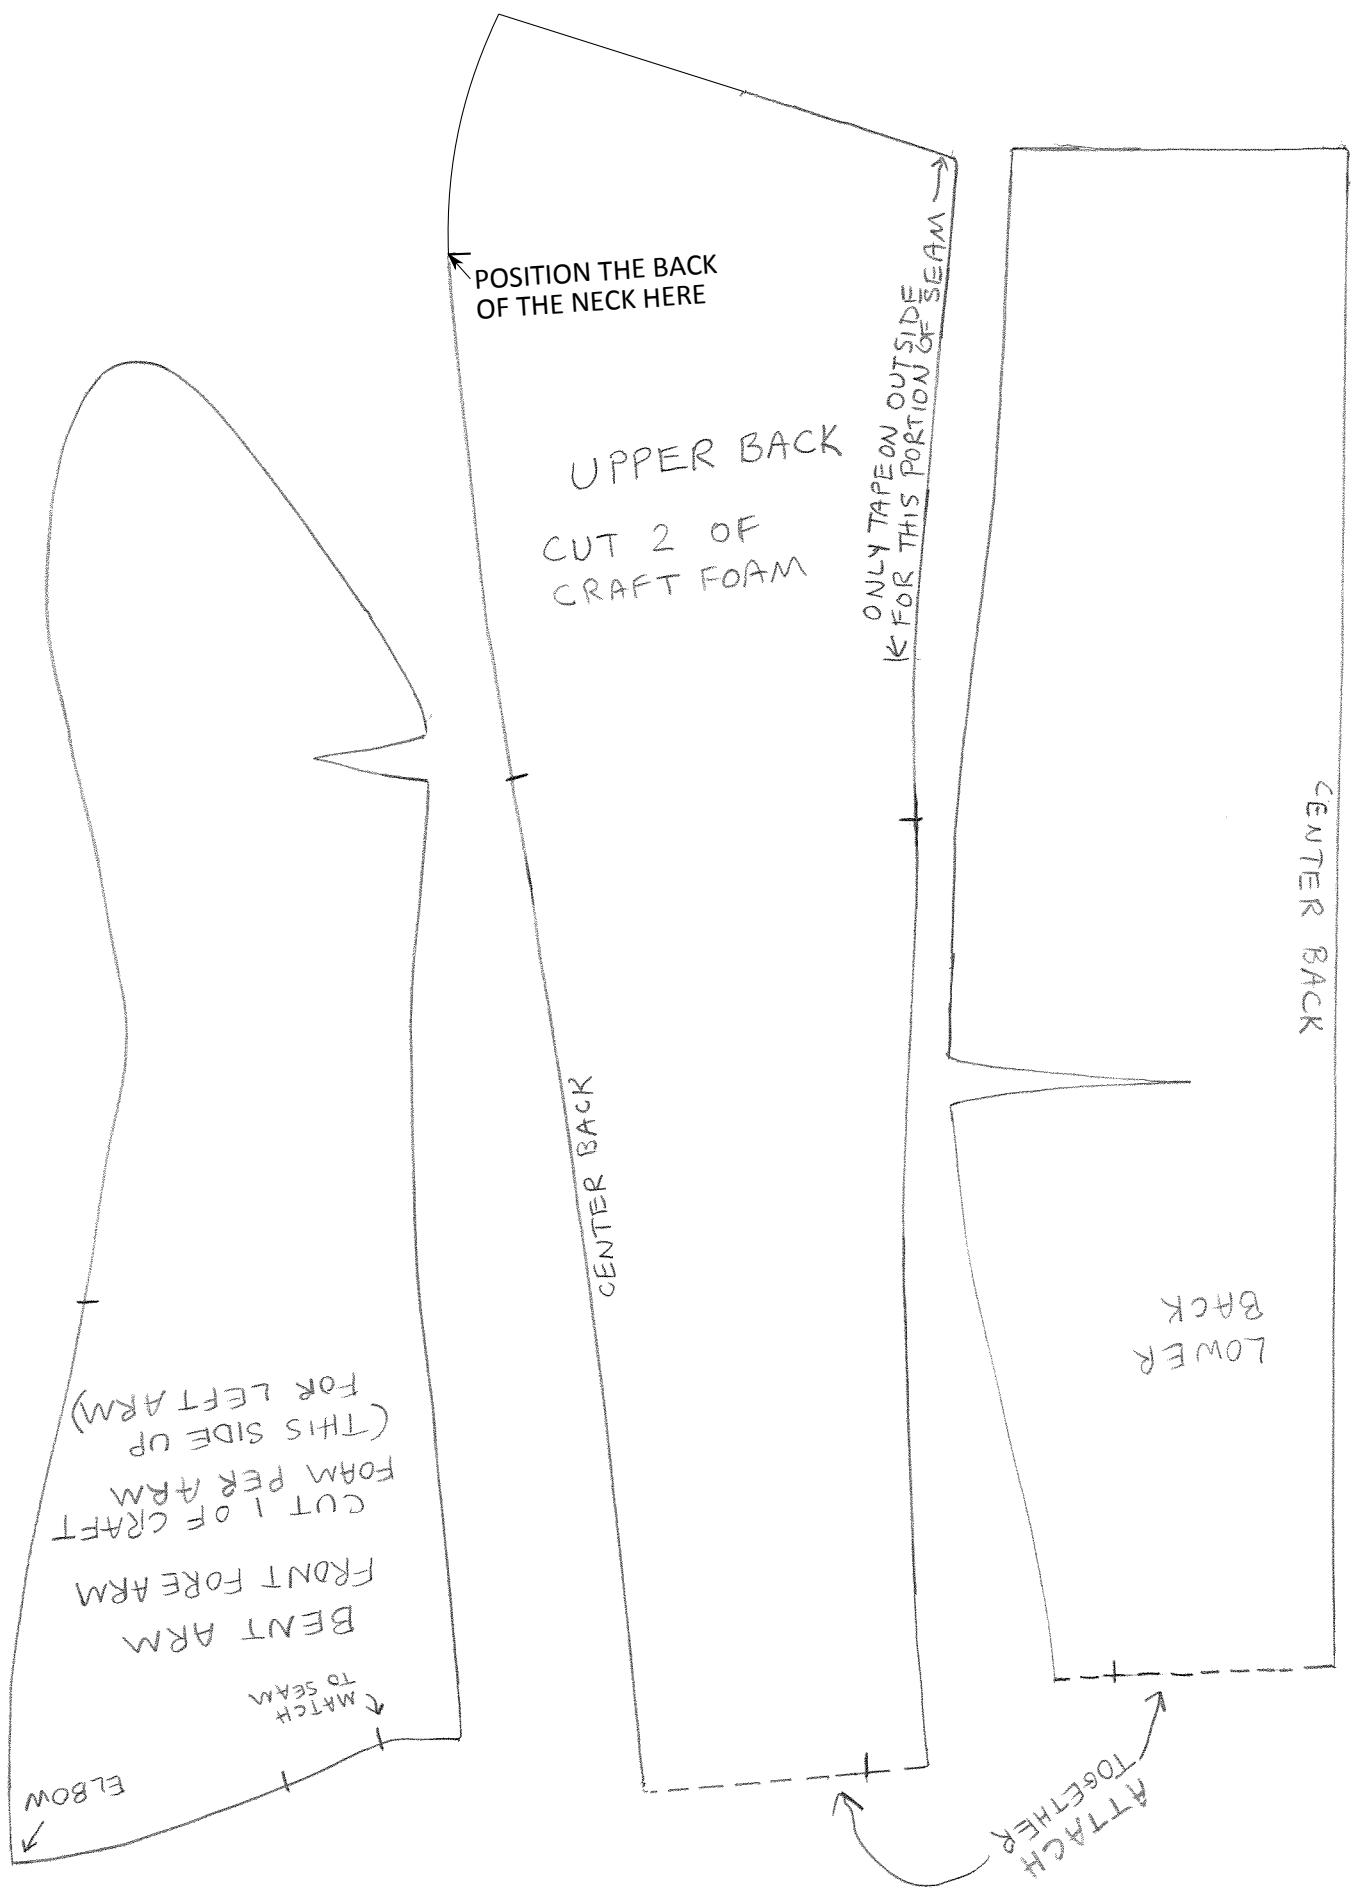

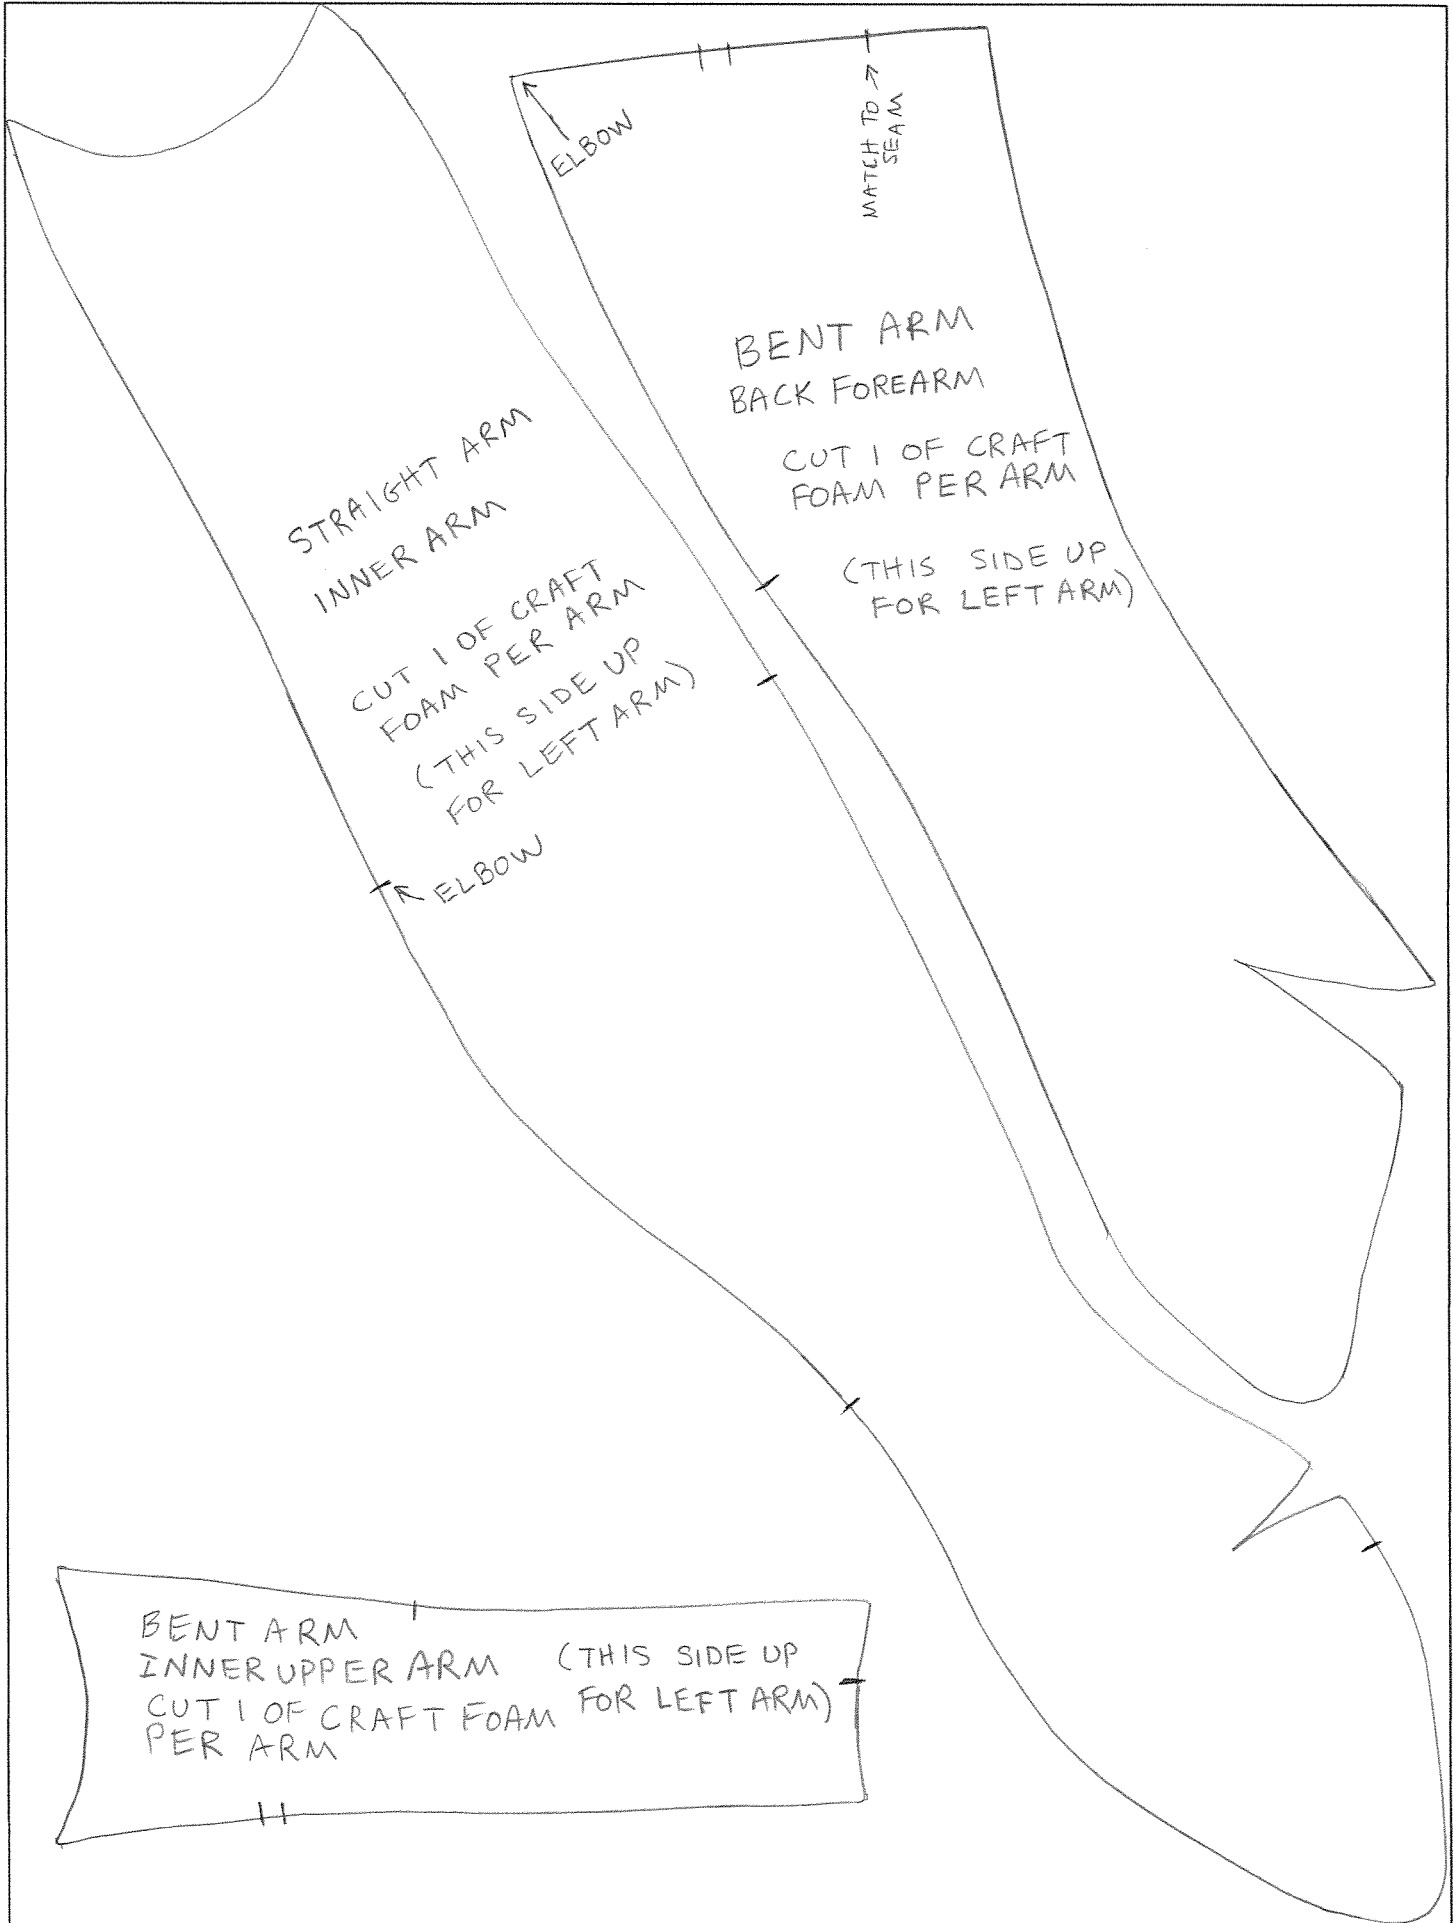

STRAIGHT ARM
INNER ARM

CUT 1 OF CRAFT
FOAM PER ARM
(THIS SIDE UP
FOR LEFT ARM)

ELBOW

BENT ARM
BACK FOREARM

CUT 1 OF CRAFT
FOAM PER ARM


(THIS SIDE UP
FOR LEFT ARM)

ELBOW

MATCH TO
SEAM

BENT ARM
INNER UPPER ARM (THIS SIDE UP
FOR LEFT ARM)
CUT 1 OF CRAFT FOAM
PER ARM

||

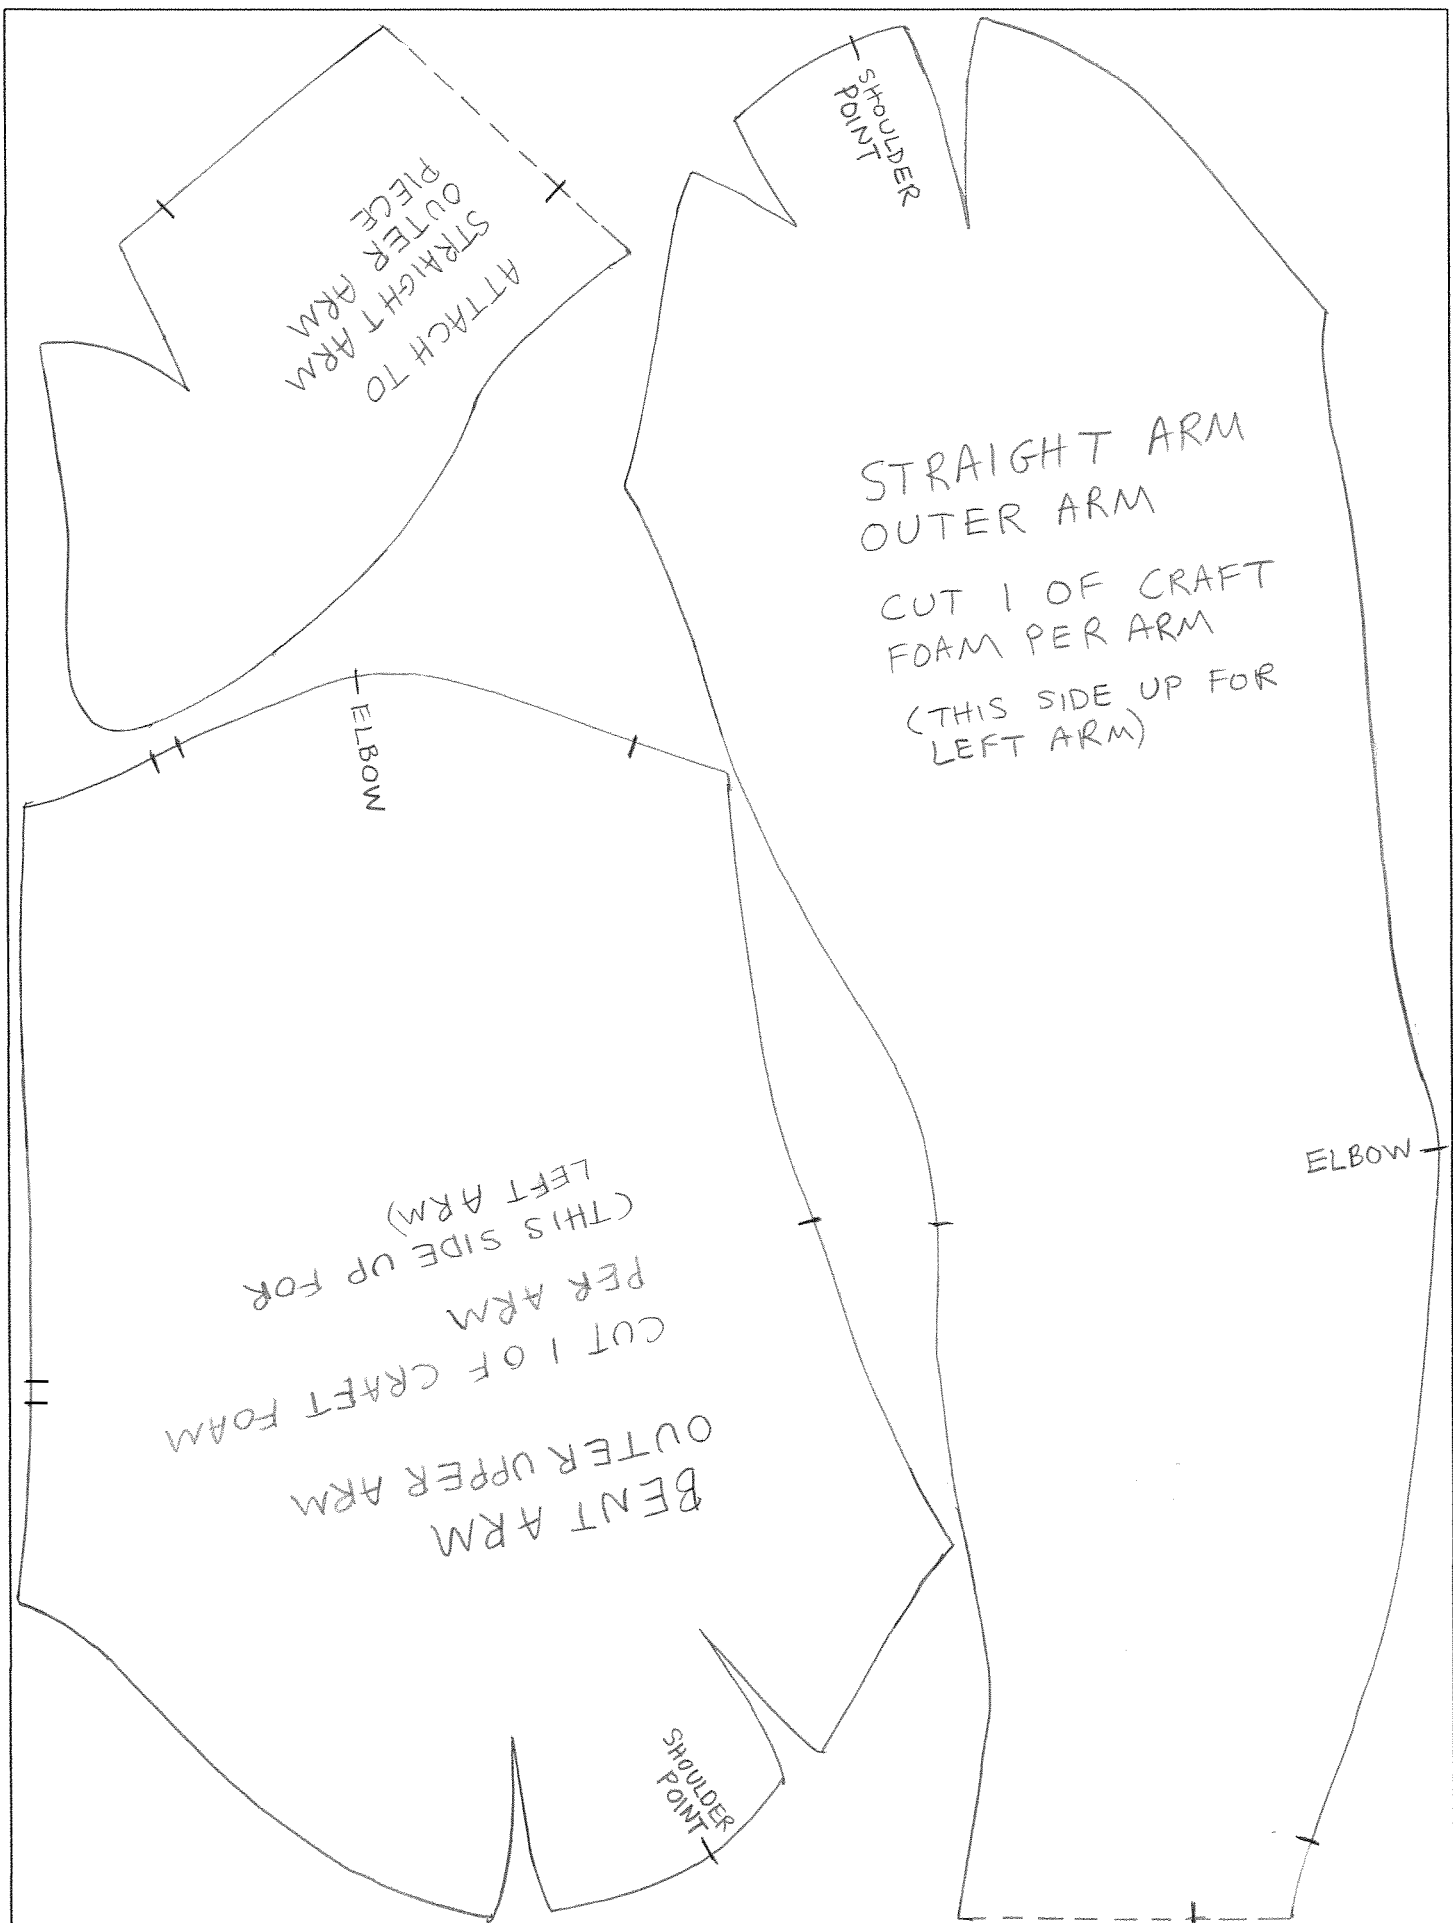

ATTACH TO
STRAIGHT ARM
PIECE
OUTER ARM

SHOULDER
POINT

STRAIGHT ARM
OUTER ARM





CUT 1 OF CRAFT
FOAM PER ARM
(THIS SIDE UP FOR
LEFT ARM)


ELBOW

ELBOW

BENT ARM
OUTER UPPER ARM
CUT 1 OF CRAFT FOAM
PER ARM
(THIS SIDE UP FOR
LEFT ARM)

SHOULDER
POINT

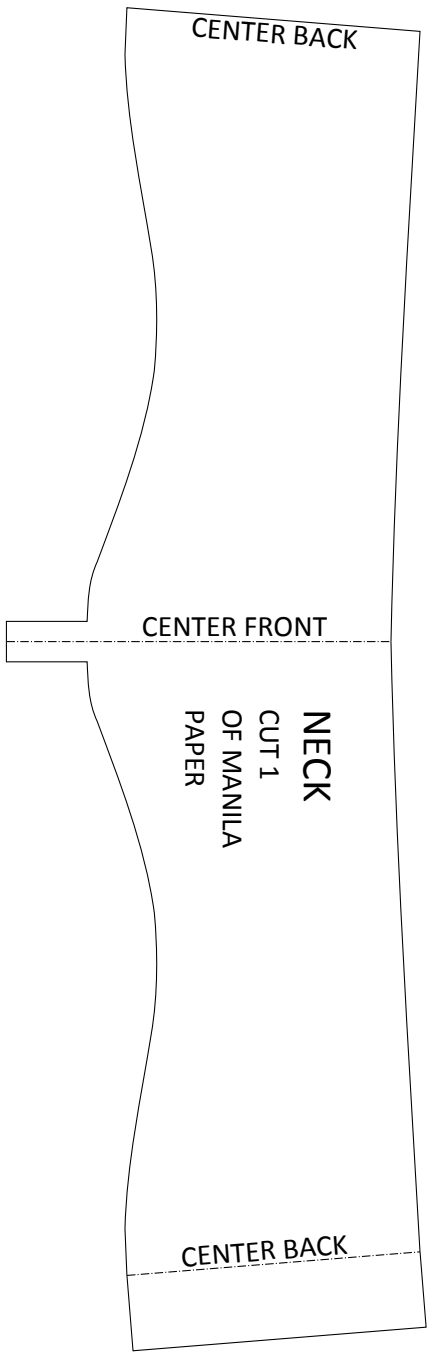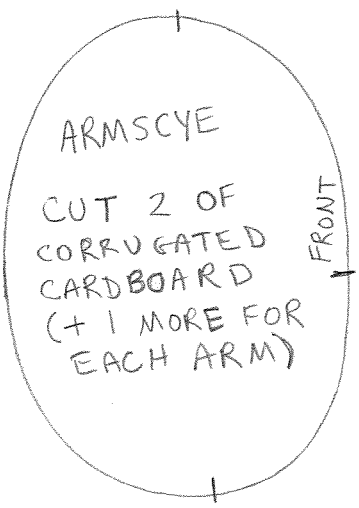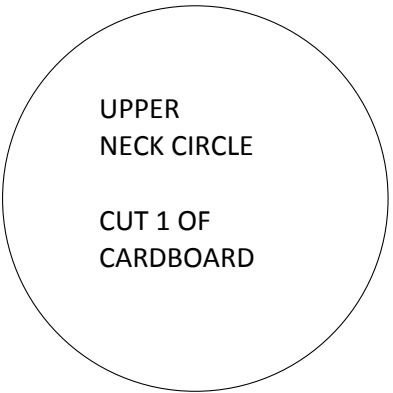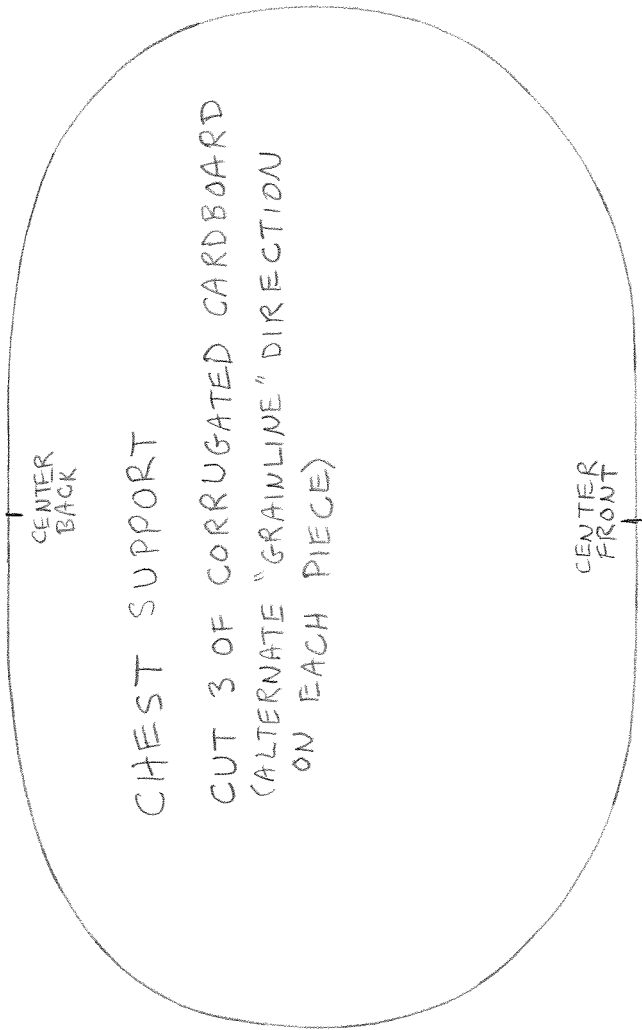

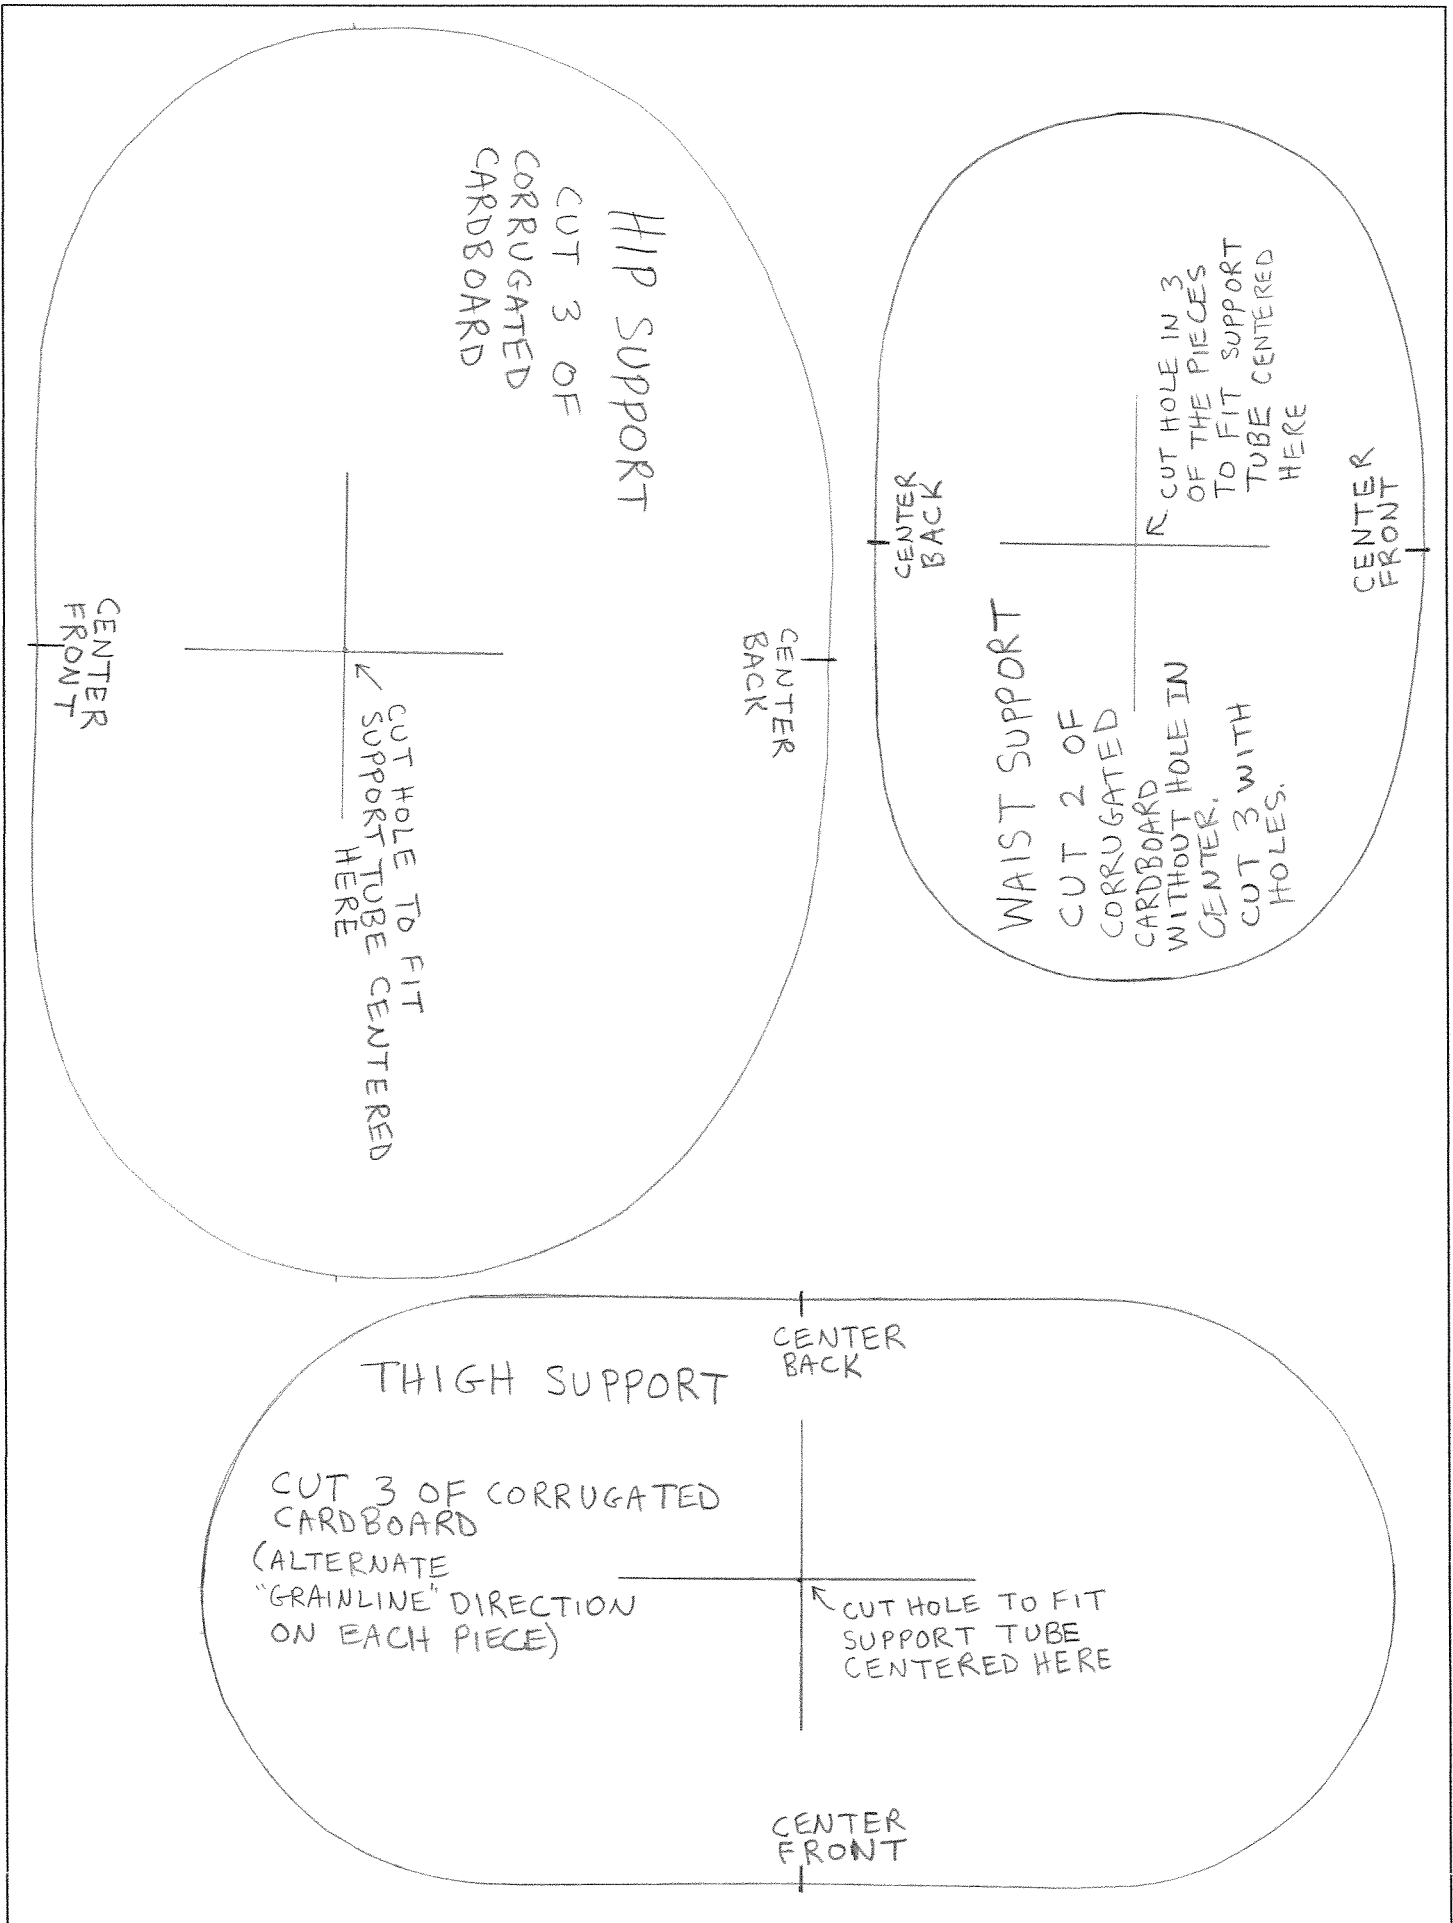

HIP SUPPORT
CUT 3 OF
CORRUGATED
CARDBOARD

CENTER
FRONT

CUT HOLE TO FIT
SUPPORT TUBE
CENTERED
HERE

CENTER
BACK

WAIST SUPPORT
CUT 2 OF
CORRUGATED
CARDBOARD
WITHOUT HOLE IN
CENTER.
CUT 3 WITH
HOLES.

CENTER
BACK

CUT HOLE IN 3
OF THE PIECES
TO FIT SUPPORT
TUBE CENTERED
HERE

CENTER
FRONT

THIGH SUPPORT

CUT 3 OF CORRUGATED
CARDBOARD
(ALTERNATE
"GRAINLINE" DIRECTION
ON EACH PIECE)

CUT HOLE TO FIT
SUPPORT TUBE
CENTERED HERE

CENTER
BACK

CENTER
FRONT